NEU_PB50 15.1.2013

GB

2 Hrs* with Battery Ejector

GP PowerBank H500

Instruction Manual

Charger Features

- Charge 1 to 4 AA or AAA NiMH batteries in any combination, Each charging slot can fully charge 1 battery (either AA or AAA).
- Connect the provided DC cord with the charger and plug it into the power source, then insert the battery into the charger, the charger will start to charge the cigarette lighter jack. (Fig. 2) DC car adapter is only included in select models.
- Power LED will light up when power is connected.
- Charge LED will flash to indicate the charging slots according to the battery indicators (+%), Different colors (above for AA and AAA NiMH batteries are set in the outer and inner part of the charging slots respectively. (Fig. 2) When inserting the batteries into the charging slots, slant the batteries to ensure smooth contact with the plates. (Fig. 4)
- Battery Icon and Charging Icon will turn solid when charging is in process.
- Charge LED will turn solid when the battery is fully charged. Charging times are individually inserted into the charging slots, the sensors in each charging slot will stop charging when full while fully and the charger will stop charging. All other Battery slots will continue.
- If the charger does not work properly, all charging slots flashing and the Charging Icon will turn off, The Warning Icon and Power LED will blink. The charger will stop charging, please check the batteries and charger for any damage or contact GP.
- The Check Mark Icon will turn solid when the battery is fully charged.
- Once charging is complete, unplug the charger from the power source and remove the batteries with the battery ejector. (Fig. 5)

For best performance and optimal safety, charge GP NiMH batteries with GP PowerBank.

Attention

Do not use NiMH batteries to become hot during charging and they will gradually cool down to room temperature after being fully charged.

1. For best result, use GP PowerBank H500 at room temperature with good ventilation.
2. Charging time may vary based on different battery capacities. (Refer to Charging Time Table).
3. Charge time may be longer on electrical device if it will not be used for a long time.
4. If the performance of the batteries decreases significantly, it is time to replace the batteries.
5. The batteries should be removed from the charger before they are scrapped and properly disposed of.

6. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent to avoid a hazard.

Caution

1. Charge GP Nickel Metal Hydride (NiMH) batteries only.
2. Do not charge other types of batteries, such as alkaline, carbon zinc, lithium, rechargeable alkaline, NiCd, rechargeable lithium batteries, as they may burn or rupture, causing personal injury and damage.
3. Never use an extension cord or any attachment not recommended by GP, as this may lead to a risk of fire, electric shock or personal injury.
4. Unplug the charger from the outlet before attempting to clean or when not in use.
5. Do not disassemble the charger.
6. Do not expose or disassemble the charger and batteries.
7. For indoor and dry location use only. Do not expose the charger to rain, snow or extreme humidity.

For charging conventional GP NiMH rechargeable batteries

1. For brand new batteries, 2 to 3 times of charging and usage cycles are required to optimize the batteries' performance.
2. If batteries are stored for more than one week, always recharge them before use.

For charging new generation NiMH rechargeable batteries (GP ReCyclo™ batteries)

1. GP ReCyclo™ batteries are pre-charged, No need to recharge prior to first use, Premix recharge if the batteries cannot power up your devices.
2. GP ReCyclo™ batteries come with good capacity retention, Remove the batteries and charge when the battery indicator shows low capacity, Recharge before use if the charger for extended periods, Always unplug the charger when it is not in use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances may leach into the groundwater and get into the food chain, damaging your health and well-being.

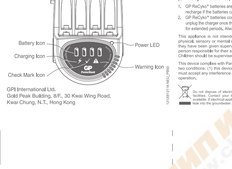

Fig.5

GP International Ltd.
Gold Peak Building, 6/F., 30 Kwai Wing Road,
Kwai Chung, N.T., Hong Kong

E

2 Hrs* avec éjecteur de pile

GP PowerBank H500

Instrucciones de carga

Características del cargador

- Cargador cumplido con cable de alimentación.
- Carga de 1 a 4 baterías de AA o AAA NiMH de cualquier combinación, Cada slot de carga puede cargar 1 batería (ya sea AA o AAA).
- Conecte el cable de alimentación suministrado al cargador y enchúfelo en la toma de corriente, luego inserte la batería en el cargador, el cargador comenzará a cargar el enchufe del encendedor del coche. (Fig. 2) El cable adaptador para coche está incluido en algunos modelos.
- El Power Led se encenderá cuando se conecte la entrada de cargador.
- Inserte las baterías GP Ni MiMh AA o AAA en los slots de carga correspondientes, el indicador de carga parpadeará según los indicadores de la batería (+%), Diferentes colores (arriba para AA y AAA NiMH baterías son en el borde exterior y en el interior de los slots de cargas respectivamente. (Fig. 2) Cuando inserte las baterías AA en los slots de cargas, ponga las baterías en ángulo para asegurar un contacto suave con las placas. (Fig. 4)
- El icono de la batería y de carga será intermitente durante la carga.
- Se se pone carga de pilas alcalinas, litium, dos pilas rechargeables alcalinas no obtendrán los mismos rendimiento, Evite de mezcla de cargas.
- Cuando la batería está cargada completamente, el Led de carga se quedará fijo.
- El cargador funciona correctamente los iconos de las baterías se apagarán, Los tiempos de carga son independiente y el cargador se apagará cuando el cargador se cargue.
- El icono de las baterías será sólido si las baterías están cargadas y la carga ha terminado, Cuando la batería está cargada, Check Mark indicará que las baterías están totalmente cargadas.
- Cuando la carga sea completa, extraiga las baterías para usar y desconecte el cargador de la toma de corriente. (Fig. 5)

Para un mejor rendimiento y seguridad, cargue sólo baterías GP con el cargador GP PowerBank.

Atención

- Las baterías de pilas alcalinas se calientan durante la carga y se enfriman hasta alcanzar la temperatura ambiente después de estar totalmente cargadas.

1. Para mejores resultados, use el cargador GP PowerBank H500 a temperatura ambiente con una buena ventilación.
2. El tiempo de carga puede variar según las diferentes capacidades de las baterías.(consulte la tabla de tiempo de carga).
3. Extraiga las baterías de aparato eléctrico o eléctrico si las baterías no se van a usar durante un tiempo prolongado.
4. Si el rendimiento de las baterías disminuye sustancialmente es el momento de cambiar las baterías.
5. Las baterías deben ser extraídas antes de que se eliminen dispositivos/accesorios.
6. Si el cable de alimentación se tiene que sustituir por un cable específico proveído por el fabricante o por un agente para evitar riesgos.

Cuidado

1. Cargue solo baterías GP Ni MiMh.
2. No cargue otros tipos de baterías, como alcalinas, alcalinas recargables o cualquiertipo tipo de pilas no especificadas por su cuenta, pueden sufrir líquido o ardor,pudiendo producir daños personales o materiales.
3. Nunca utilice un alargador de contienta o adaptador no recomendado por GP porque podría producir cortocircuitos, un incendio y daños personales.
4. Desenchufe el cargador de la toma de corriente si no se va a usar.
5. No corto-circuite las baterías.
6. No mojar, quemar o alterar el cargador o las baterías.
7. Use el cargador en espacios cerrados y secos. No expongas el cargador a la lluvia,nieve o condiciones extremas.

Para cargar pilas recargables GP NiMH convencionales.

1. Para pilas nuevas se necesario cargarlas de 2 a 3 veces para optimizar su rendimiento.
2. Si las pilas se almacenan más de una semana sin usar, siempre hay que recargarlas antes de usarlas de nuevo.

Para cargar pilas recargables de NiMH de nueva generación (GP ReCyclo™ baterías)

1. Las pilas GP ReCyclo™ ya viene cargadas de fábrica, No necesitan cargarse una vez se van a utilizar por primera vez, Por favor recárgalas si no funcionan en su primer uso.
2. GP ReCyclo™ baterías tienen una buena retención de capacidad, Retire las pilas del cargador una vez se hayan cargado, No las deje en el cargador durante largos periodos de tiempo y desconecte el cargador si no se va a utilizar.

No lea e la buena seguya atentiva, use instrucciones de mantenación de este tipo de desechos. Cuando quiera desechar un electrodoméstico, no lo tire a la basura municipal, use los centros de recogida selectiva de desechos en ventaderos autorizados adaptados a puestos Mover baterías en el cargador y pueden ocasionar daños personales y materiales.

Si que pasiera el aparato electrónico tiene sustancias tóxicas que pueden llegar a la tierra y a las aguas y a las aguas y a las aguas